

## Project

## Skidproofing Wood, Metal, and Concrete Surfaces

Combine QUIKRETE® Sand Mix and QUIKRETE® Concrete Acrylic Fortifier to create a nonskid surface around pools, walks and boat docks.

### Required Tools & Materials

---


- QUIKRETE® Sand Mix QUIKRETE® Concrete Acrylic Fortifier
- Masking tape
- Trowel Brush or broom
- Hoe
- Mixing Box

### Step by Step


---

#### Application

1. Lay masking tape around the edges of the surface to be coated. Make certain that the surface is clean and free of dust, dirt and loose matter.
2. Mix 1-2/3 quarts of fortifier with 60 pounds of Sand Mix; for larger and smaller mixtures refer to the directions on the back of the fortifier bottle. Add water to achieve the desired consistency.
3. Trowel the mix onto the surface in a minimum ¼"-thick coat.

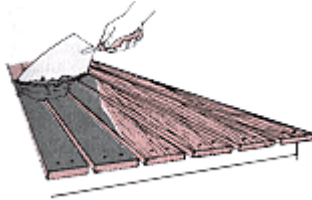

4. Brush the mix to achieve a rough texture.

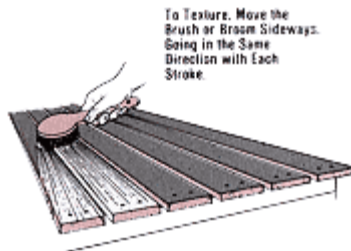

**For Best Results**

Acrylic paint can be added to the wet mix before application if a particular color is desired.