


# QUIKRETE®

## ASPHALT POTHOLE REPAIR

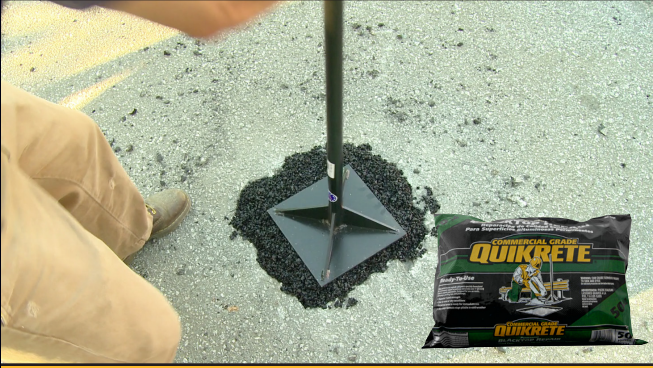

### INSTRUCTIONS:

1. Square cut the vertical edges of the hole to provide proper confinement of the repair.
2. Sweep area to be filled and remove all loose material.
3. Fill the hole with Permanent Blacktop Repair to a height of ½" (13 mm) above the surrounding pavement surface. Do not apply less than 1" (25 mm). Repairs over 1" (25 mm) thick must be applied in 1" (25 mm) lifts and adequately compacted before additional material is added.
4. Compact to a level surface with a tamper. The repair may be covered with plywood or plastic and then driven upon with the front wheel of a car to further compact the repaired area.
5. Traffic can begin immediately after leveling and compacting.

### TOOLS AND MATERIALS NEEDED:

- QUIKRETE® Commercial Grade Permanent Blacktop Repair
- Circular Saw or Handpick
- Chisel
- Tamp
- Broom



**SCAN** *to* **VIEW**

**Permanent Repairs  
to Asphalt Potholes  
VIDEO**

or visit [www.quikrete.com](http://www.quikrete.com)

# QUIKRETE®

## REPARACIÓN DEL AGUJERO DEL ASFALTO



### INSTRUCCIONES:

1. Cortar a escuadra los bordes verticales del agujero para aislar el área de reparación.
2. Barrer el área a ser rellenada y retirar todo material suelto.
3. Llenar el agujero con reparador para superficies bituminosas permanentes hasta una altura de 0.5 pulgadas (13 mm) por encima de la superficie de pavimento circundante. No aplicar menos de 1 pulgada (25 mm) de espesor. Es preciso que las reparaciones con un espesor mayor de 1 pulgada (25 mm) sean aplicadas en capas de 1 pulgada (25 mm), y asimismo, que se las compacte adecuadamente antes de colocar material de reparación adicional.
4. Compactar el material de reparación con un pisón hasta lograrse una superficie al ras. Para compactar aún más el área reparada, se puede cubrir el agujero relleno con madera contrachapada o plástico, y a continuación, pasar sobre éste la rueda delantera de un automóvil.
5. El tráfico sobre el área reparada puede comenzar tan pronto se la haya nivelado y compactado.

### HERRAMIENTAS Y MATERIALES NECESARIOS:

- Reparador permanente QUIKRETE® para asfalto, de nivel comercial
- Sierra circular o pico de mano
- Cincel
- Apisonadora
- Escoba